



1

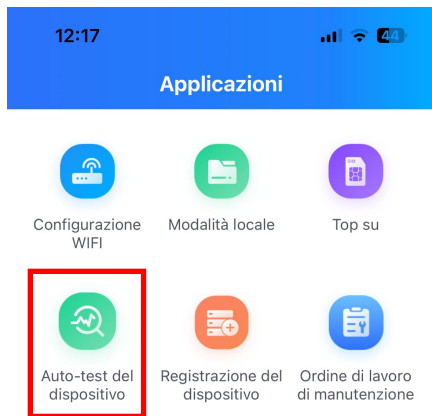

2

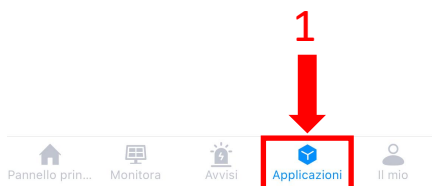


1

3




4

2


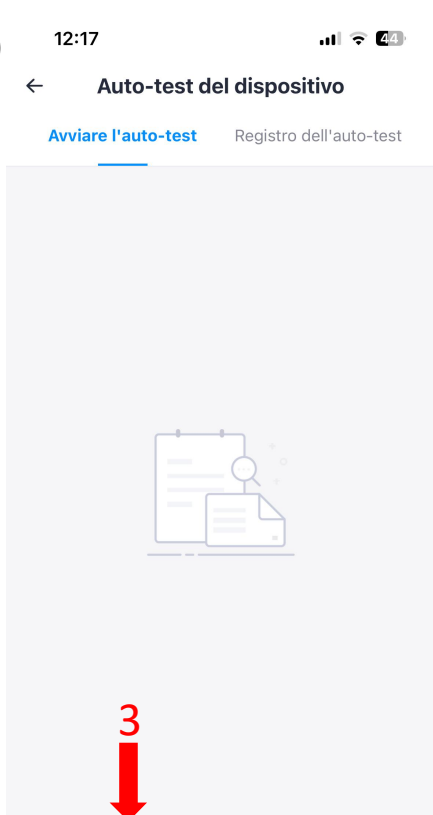


3

4

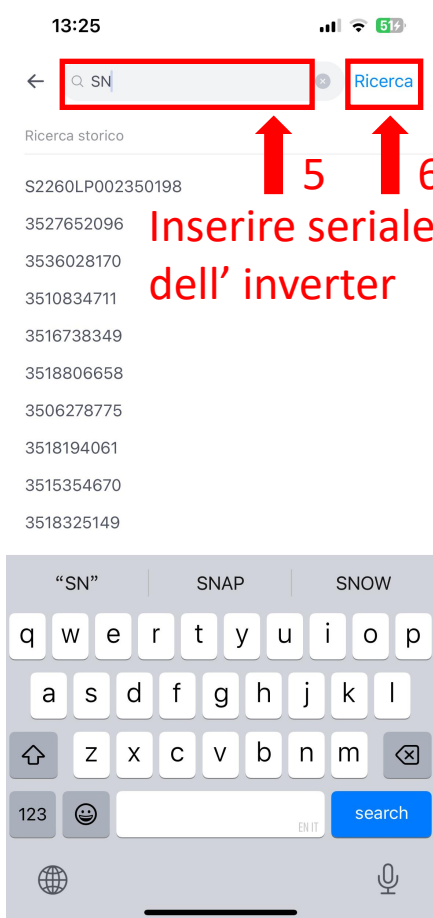

Inserire seriale
dell' inverter

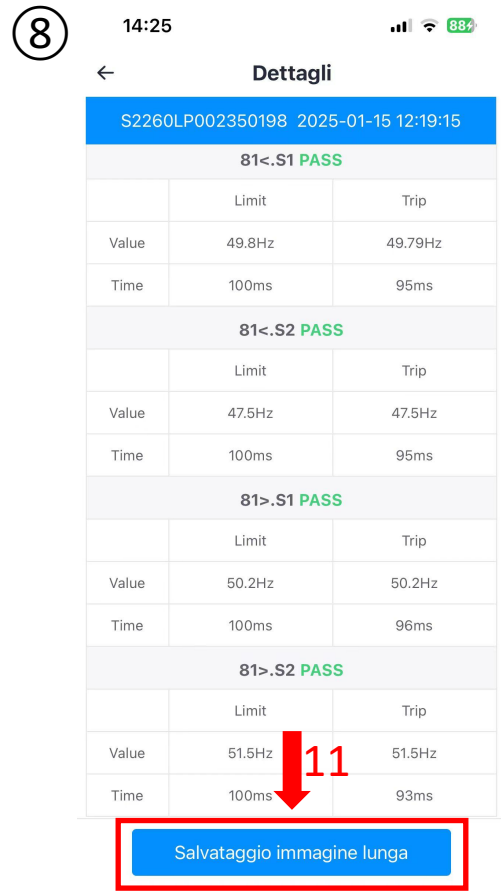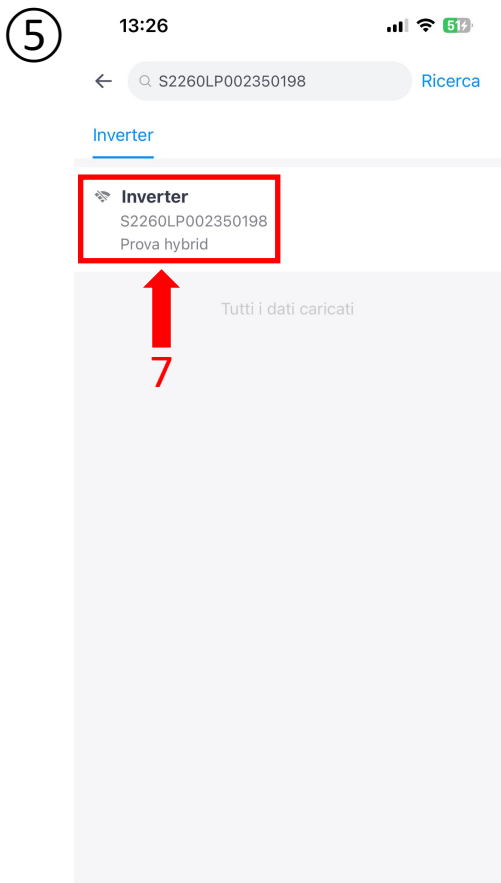

27.S1 PASS

	Limit	Trip
Value	195.5V	195.4V
Time	1500ms	1500ms

27.S2 PASS

	Limit	Trip
Value	34.5V	34.2V
Time	200ms	196ms

59.S1 PASS

	Limit	Trip
Value	253V	253V
Time	3000ms	2991ms

59.S2 PASS

	Limit	Trip
Value	264.5V	265V
Time	200ms	199ms

81<.S1 PASS

	Limit	Trip
Value	49.8Hz	49.79Hz
Time	100ms	95ms

81<.S2 PASS

	Limit	Trip
Value	47.5Hz	47.5Hz
Time	100ms	95ms

81>.S1 PASS

	Limit	Trip
Value	50.2Hz	50.2Hz
Time	100ms	96ms

81>.S2 PASS

	Limit	Trip
Value	51.5Hz	51.5Hz
Time	100ms	93ms

L'immagine del
risultato
AUTOTEST verrà
salvata nel suo
album fotografico